## COMPACTOR TIPS & TROUBLESHOOTING GUIDE

## **Diagram of Key Compactor Parts**







npactor Power Unit with Emergency Stop Button

Disconnect

With Surety meerioc

## **Operational Tips and Troubleshooting Guide**

- ✓ Safety interlock switch on the door is the door shut and locked when trying to run the unit? Door **MUST** be shut and locked to run.
- ☑ The Power Disconnect must be turned ON.
- ☑ Emergency Stop Button must be pulled <u>OUT</u>.
- Power to the compactor must be **ON**.
- ☑ Is the compactor full? How to read the fullness of the compactor:
  - Read the pressure gage while compactor is <u>RUNNING</u>, if it hovers around 1800+ PSI, unit is full, otherwise, NOT full
  - Bang on side of compactor hollow sound = NOT full

