## COMPACTOR TIPS & TROUBLESHOOTING GUIDE

## **Diagram of Key Compactor Parts**



## **Operational Tips and Troubleshooting Guide**

- ✓ Safety interlock switch on the door is the door shut and locked when trying to run the unit? Door MUST be shut and locked to run.
- ✓ The Power Disconnect must be turned <u>ON</u>.

Emergency Stop Button must be pulled <u>OUT</u>.

 $\checkmark$  Power to the compactor must be <u>**ON**</u>.

☑ Is the compactor full? How to read the fullness of the compactor:

- Read the pressure gage while compactor is <u>RUNNING</u>, if it hovers around 1800+ PSI, unit is full, otherwise, NOT full
- Bang on side of compactor hollow sound = NOT full

